


LIGHTSPOT

LIT BELL PUSH | BELEUCHTBAR TASTER | LUMINEUX
BOUTON POUSSOIR | LUMINOSO PULSADOR DE TIMBRE


- EN Getting started
- DE Erste Schritte
- FR Démarrage
- NL Aan de slag
- FI Aloitusopas
- DK Kom i gang
- IT Operazioni preliminari
- ES Para empezar
- PT Para começar
- GR Πρώτα βήματα
- SE Kom igång

D534WE

1

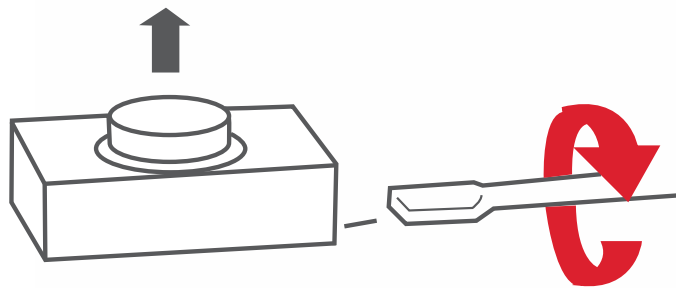

2

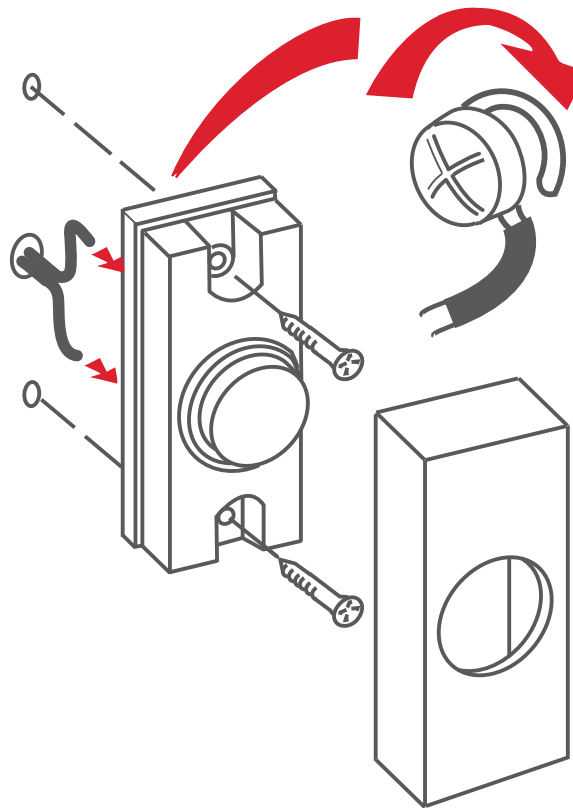

ATTENTION!	
	—
	✓

8V 2A



- EN Trouble shooting
- DE Fehlerbehebung
- FR Dépannage
- NL Probleemoplossing
- FI Vianmääritys
- DK Problemløsning
- IT Risoluzione dei problemi
- ES Solución de problemas
- PT Resolução de problemas
- GR Αντιμετώπιση προβλημάτων
- SE Felsökning

livewell.honeywell.com