


DIMEX

PUSH | DRUCKTASTER | POUSSOIR | PULSADOR

- | | | | | | |
|----------------------------------|--------------------------|------------------------|------------------------|-----------------------|----------------------|
| EN Getting started | DE Erste Schritte | FR Démarrage | NL Aan de slag | FI Aloitusopas | DK Kom i gang |
| IT Operazioni preliminari | ES Para empezar | PT Para começar | GR Πρώτα βήματα | SE Kom igång | |

D824

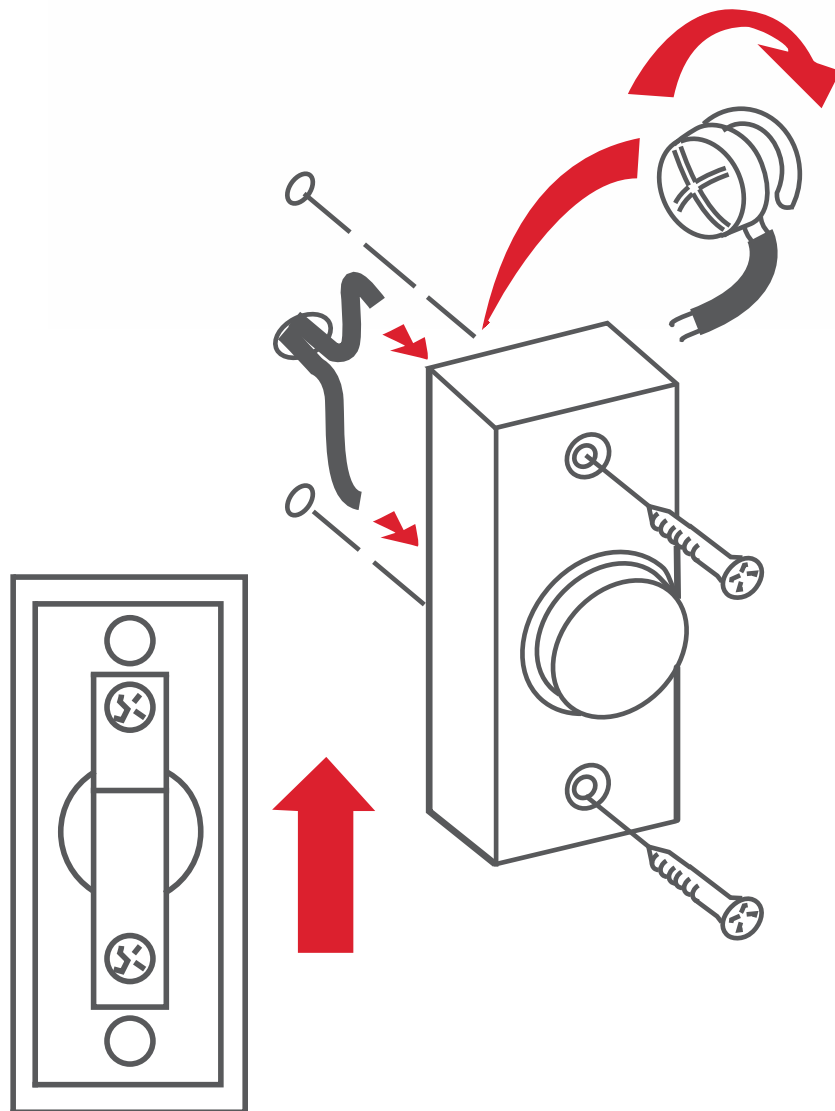

1-24V 2A



- | | | | | |
|------------------------------------|------------------------------------|---------------------------------|----------------------------------|------------------------|
| EN Trouble shooting | DE Fehlerbehebung | FR Dépannage | NL Probleemoplossing | FI Vianmääritys |
| DK Problemløsning | IT Risoluzione dei problemi | ES Solución de problemas | PT Resolução de problemas | |
| GR Αντιμετώπιση προβλημάτων | SE Felsökning | | | |

livewell.honeywell.com